

Bandsaw Parts List

Ref. No. Part No. Description

Bandsaw Main Casting and Cover

1	502542	Main frame assembly
2	513810	Caution decal
3	502741	Serialized nameplate
4	502546	Cover stud
5	102582	5/16"-18 x 1/2" Allen Setscrew (2)
6	502737	Cover and decal
7	502740	Cover knob (3)

Blade Tensioning Assembly

8	501626	Retaining ring
9	502700	Thrust washer
10	436732	10-24 x 1/2" Panhead screw
11	501470	7/32" Washer
12	502690	Tension indicator scale
13	502686	Retaining ring
14	502702	Blade tension nut
15	502701	Tension spring
16	122040	5/16"-18 x 1/2" Hex bolt
17	120393	5/16" Washer
18	120373	5/16" Square nut
19	502687	Upper wheel arm and axle
20	114663	5/16"-18 x 3/4" Flathead screw (2)
21	502685	Bracket
22	502704	Fiber washer
23	502703	Left-hand special screw

Upper Wheel

	502691	Upper wheel assembly (parts 24 and 27)
24	502691*	Upper wheel and bearings
25	502722	Retaining ring
26	502720	Fiber washer
27	502694	Rubber tire

Lower Wheel

	509032	Lower wheel assembly (parts 27 and 30)
27	502694	Rubber tire
28	120834	5/16"-18 x 1/2" Hex bolt
29	502726	Bearing retainer
30	509032*	Lower wheel, bearing and axle

*Sold only as part of an assembly

Table Trunnions

10	436732	#10-24 x 1/2" Panhead screw
11	501470	7/32" washer (2)
17	120393	5/16" washer (4)
28	120834	5/16"-18 x 1/2" Hex bolt (4)
31	502667	Tilt indicator scale
32	502675	Trunnion (2)
33	502676	19/32" Washer (4)
34	120384	3/8" Washer
35	120394	3/8"-24 Stop nut
36	502699	Thrust washer
37	513061	Tilt lock assembly
38	274737	10-24 Hex nut (2)
39	502696	3/8"-24 x 3" Table clamp bolt (2)

Accessories and Miscellaneous

40	513701	Push stick
41	513868-04	3/16" Allen wrench
42	513868-01	5/32" Allen wrench
43	513777	Eccentric mounting tubes (2)