

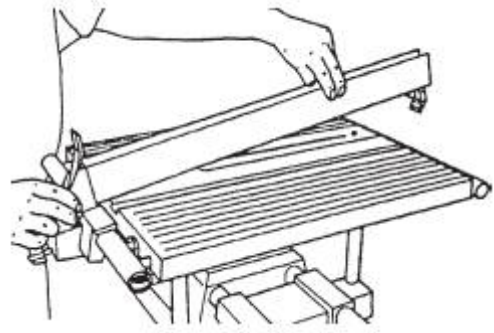


## ALIGN THE RIP FENCE (MARK V MODEL 510)

Place the Rip Fence on the Worktable by first putting the Fence Base on the front, as demonstrated, then lowering the rest of the Rip Fence.

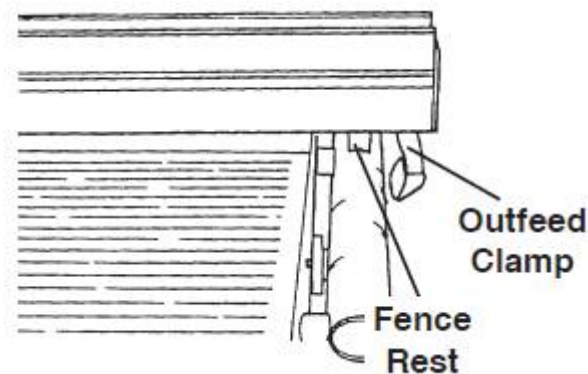

Use a 5/32" Allen Wrench to back out the Adjusting Set Screw from the Fence Base so it doesn't contact the infeed Table Tube.

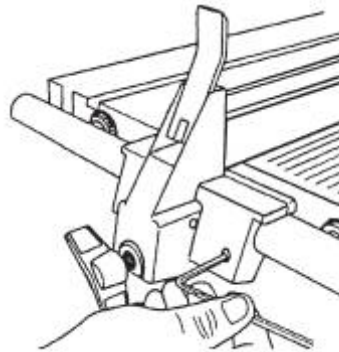

Check to see if the Fence Rest fully contacts the outfeed Table Tube, as shown in If it doesn't, adjust the Fence Rest by doing the following:

1. Raise the outfeed end of the Rip Fence and use a Medium Phillips Screwdriver to loosen the two Screws that attach the Fence Rest. Tighten the Fence Rest just enough to move it with firm pressure.
2. Place the Rip Fence back on the Table and lock the Handle.
3. Use your fingers to adjust the Fence Rest until it fully contacts the outfeed Table Tube.
4. Unlock the Handle and carefully raise the Fence. Use the Medium Phillips Screwdriver to tighten the Fence Rest Screws.
5. Unlock the Handle and carefully raise the Fence. Use the Medium Phillips Screwdriver to tighten the Fence Rest Screws
6. Recheck the Fence Rest by remounting the Rip Fence on the Worktable. If further adjustments are needed, repeat these steps.

