


6. Mark the center of the middle point of slats on both ends, and mark the centerpoint of the top of the arch on both ends.

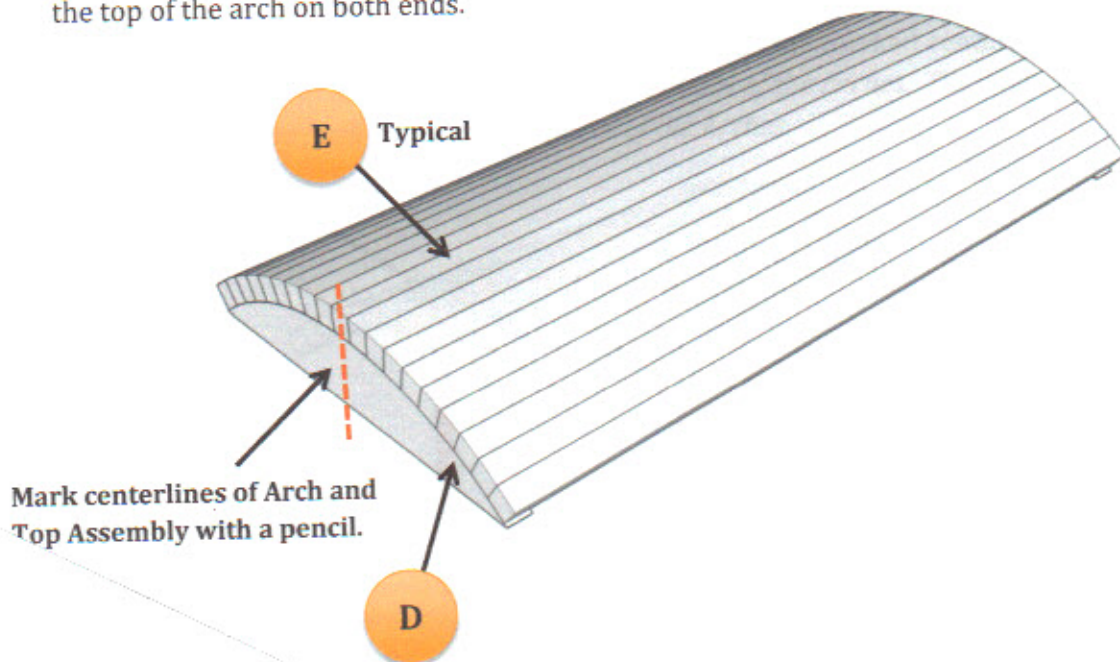

Turn the slats over on a flat surface. Squeeze a small bead of

10.

11.

12. Glue a

13. After the

