



8. Spread glue along the curved face of the two Arches.
9. Align the marked centerpoint of the Top Assembly with the marked centerpoints of the Arches. *Note: the slat assembly will overhang the sides of the Arches. The ends of the slat assembly should be flush with the outer faces of the Arches.*

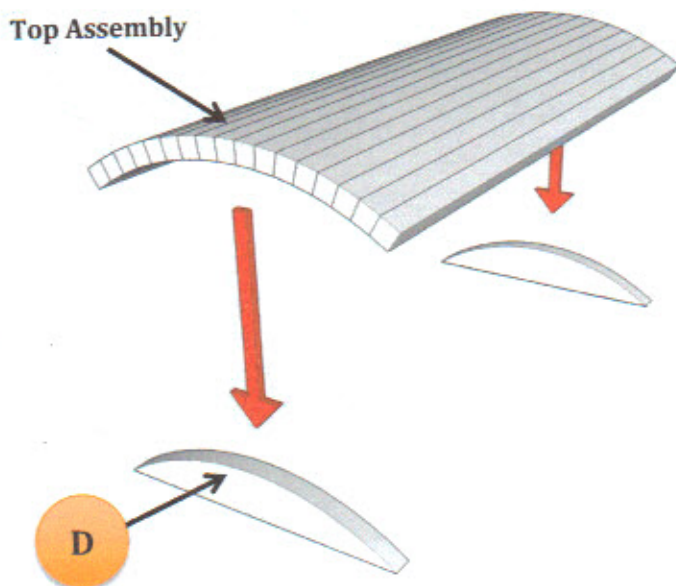


10. Brad nail each end of each slat to the curved face of the arch, then remove the tape.
11. After the Top Assembly has been glued and nailed, the bottom of the Top Slat Ends (F) should be trimmed flush with the bottom of Arches.
12. Glue and nail Top Slat Ends (F) in place. Excess glue should be wiped off.
13. After the assembly is dry, it should be trimmed to a final width of 14".

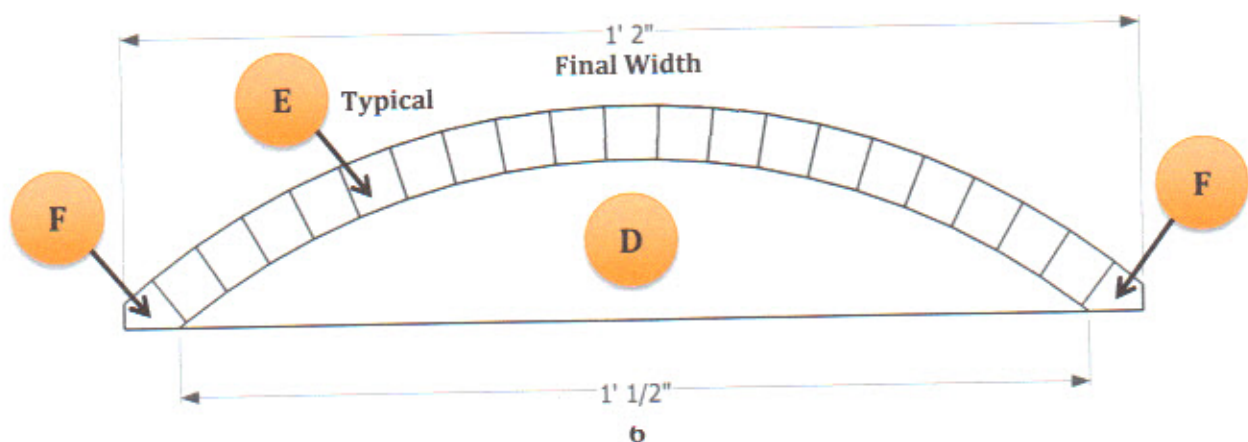


General Cutting

1. Cut all parts to rough dimensions specified in Cutting List, with the exception of Dovetail Keys, which will be cut in a later step.
2. Cut arch in Parts D as shown below.

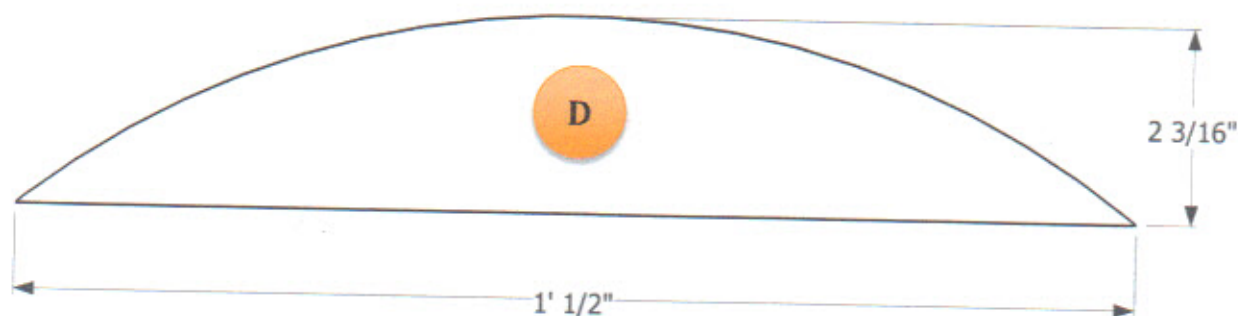

3. Cut a 2° angle on both sides of each Top Slat (E) or Top Slat End (F), from top to bottom, so that the top is $3/4''$ wide and the bottom is $23/32''$ wide.

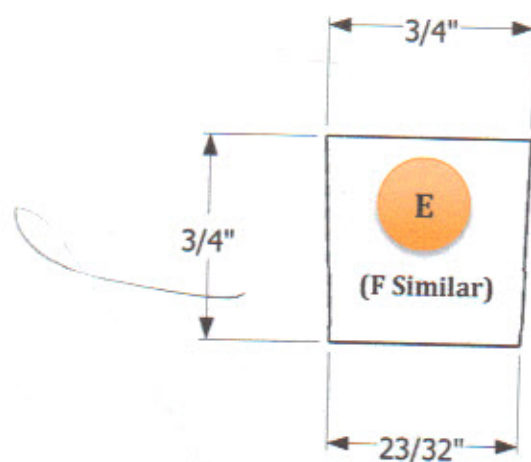

$23/32$

$1/6$