
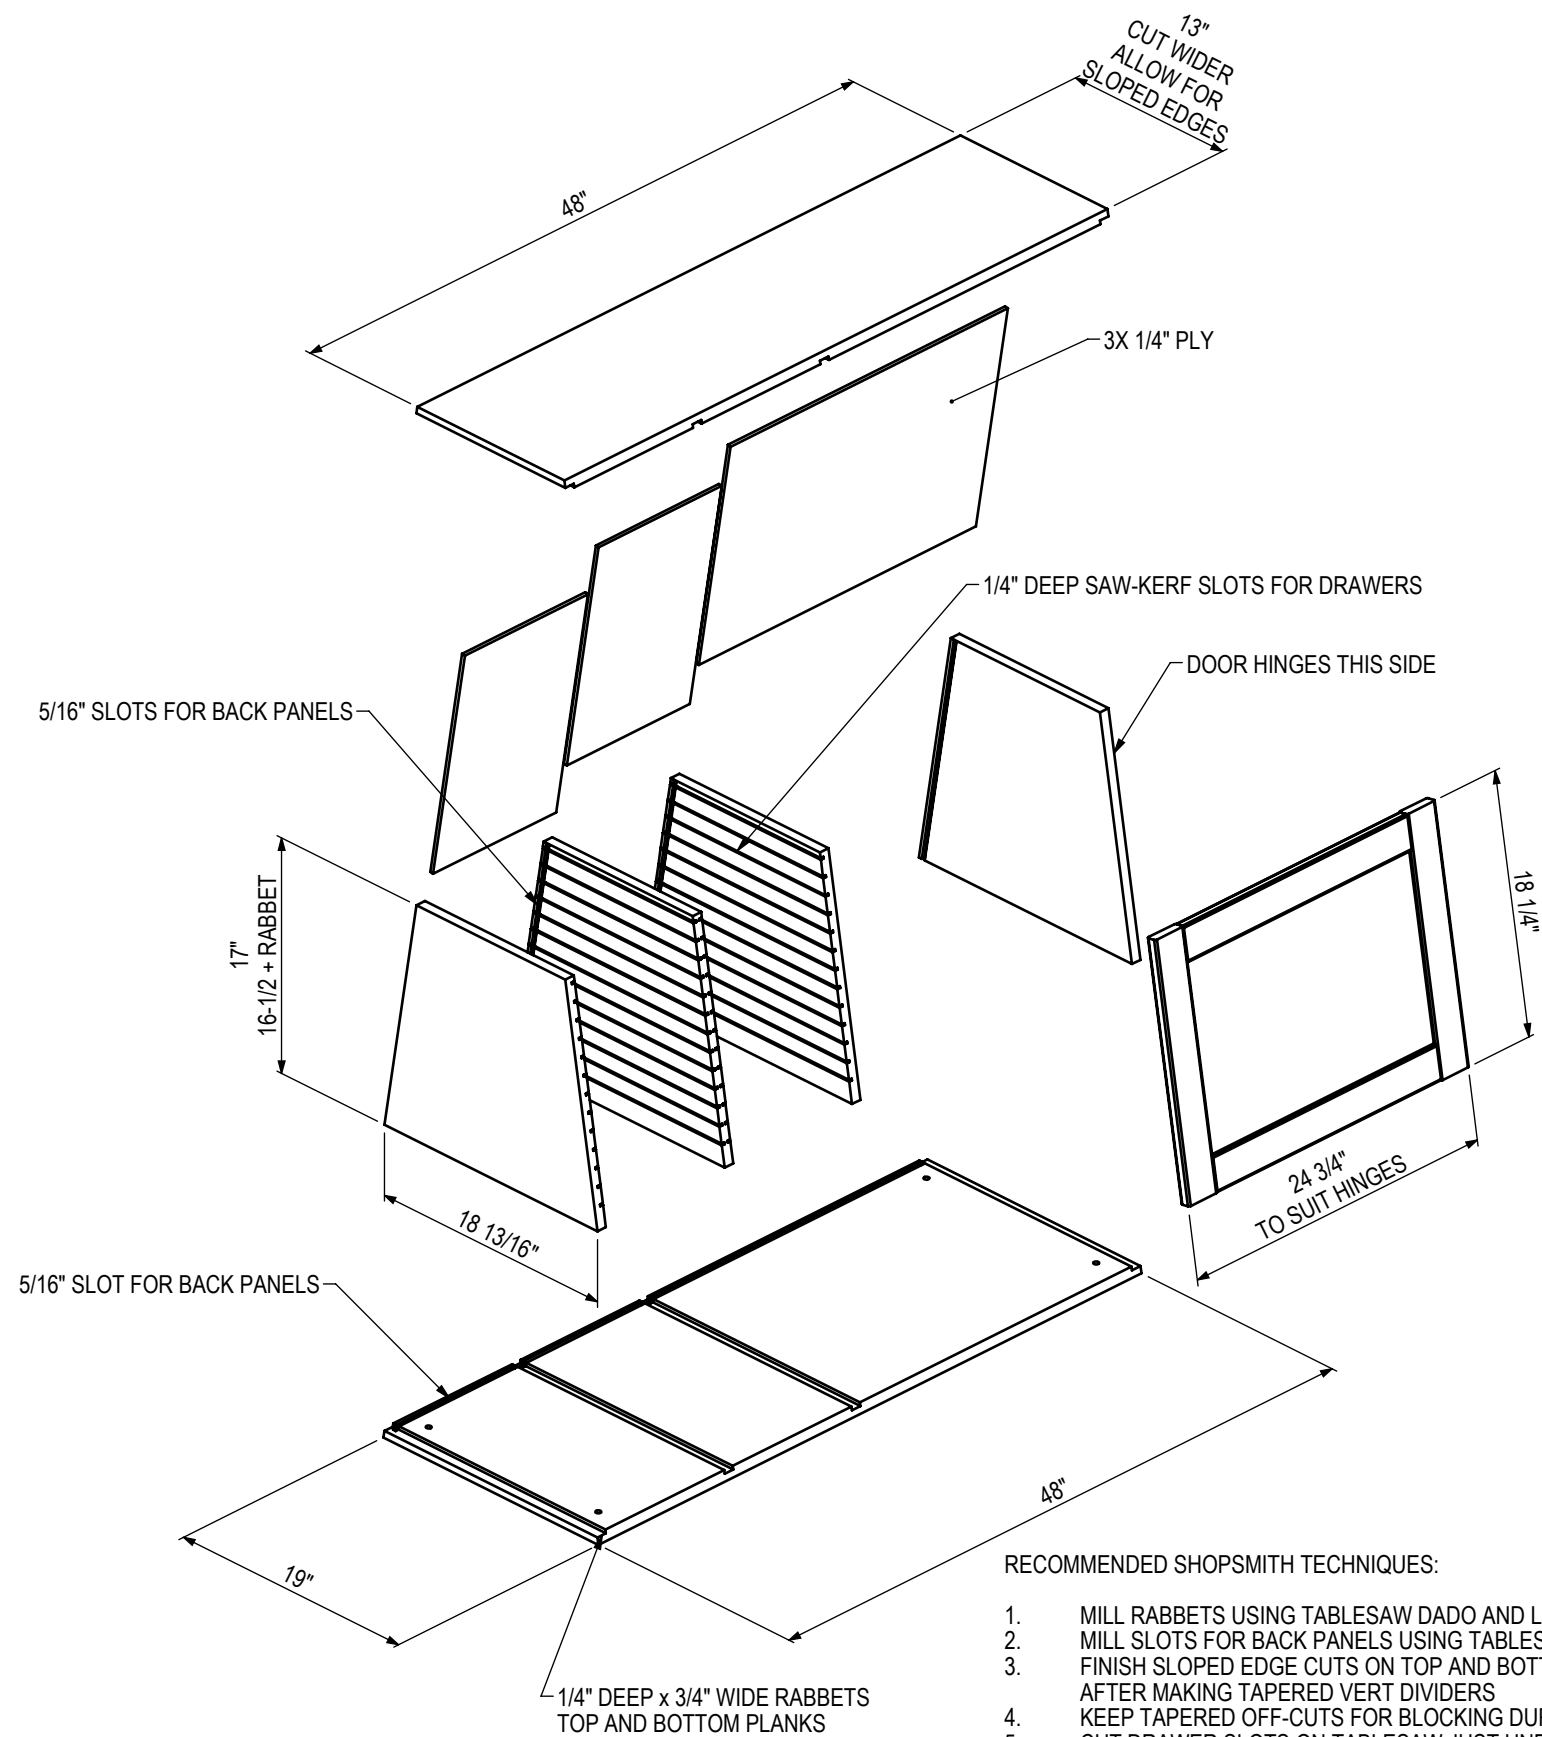
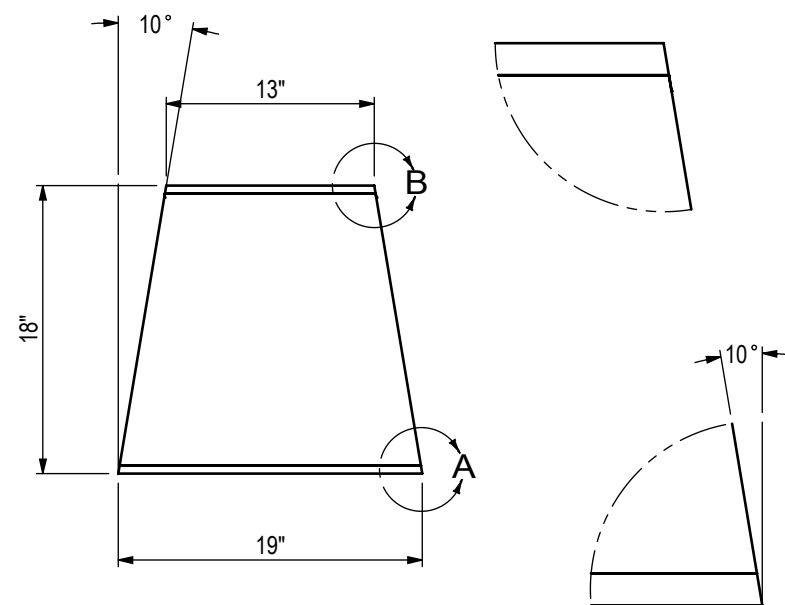


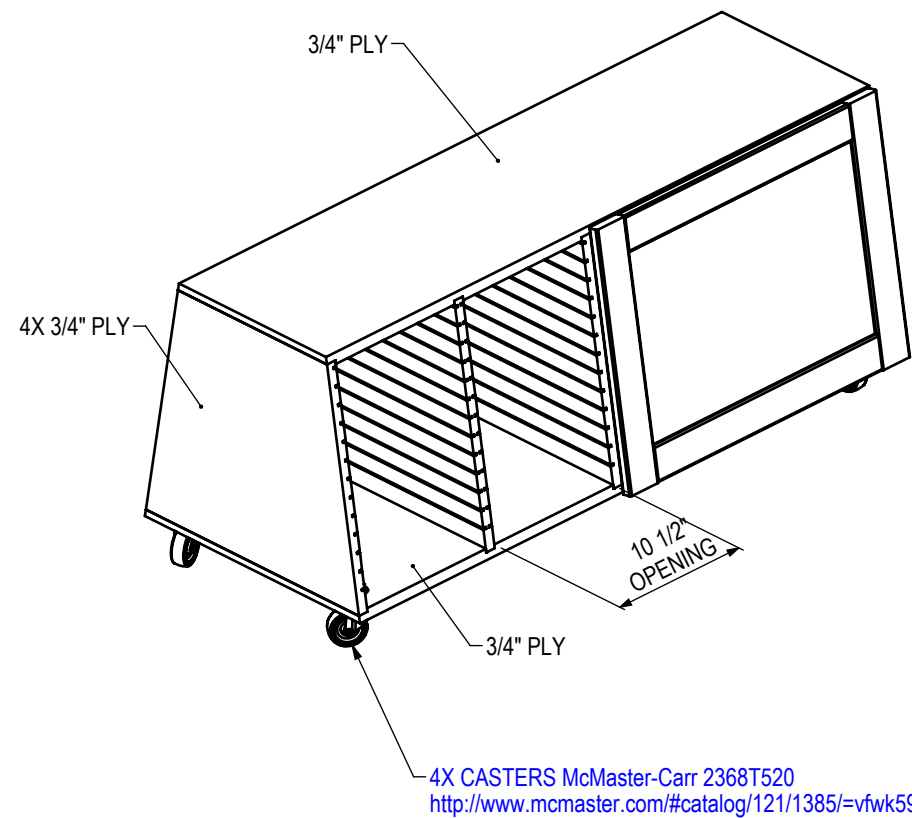

RECOMMENDED SHOPSMITH TECHNIQUES:

1. MILL RABBETS USING TABLESAW DADO AND LARGE CROSS-CUT SLED
2. MILL SLOTS FOR BACK PANELS USING TABLESAW AND LARGE CROSS-CUT SLED
3. FINISH SLOPED EDGE CUTS ON TOP AND BOTTOM PLANKS AFTER MAKING TAPERED VERT DIVIDERS
4. KEEP TAPERED OFF-CUTS FOR BLOCKING DURING GLUING
5. CUT DRAWER SLOTS ON TABLESAW JUST UNDER 1/4" DEEP. USE LARGE CROSS-CUT SLED
6. NO METAL FASTENERS FOR CABINET WORK. GLUE AND CLAMP ONLY